

CAPSURE™



User Manual





Equipment Information

Use of this equipment in a manner other than that specified by X-Rite, Incorporated may compromise design integrity and become unsafe.

Warning: This instrument is not for use in explosive environments.

No user serviceable parts in this product.

For your safety, do not look directly into the measurement optics when the instrument is on.

Do not immerse the instrument in liquid.

Cold weather may affect the speed of the display and the accuracy of matches.

Do not expose the instrument to extreme heat; do not leave in the sun.

Transportation: This product contains a lithium-ion battery. Should you need to ship this device, you may wish to consult published *guidance documents* by one or more of these organizations for advice on how to comply with the regulations: IATA, ICOA, IMDG & PHMSA. The single cell battery contained in the CAPSURE device is 25g in weight, 3.7V, 1030mAh, and complies with the UN 38.3 tests in effect the year it was originally shipped.



Instructions for disposal: Please dispose of Waste Electrical and Electronic Equipment (WEEE) at designated collection points for the recycling of such equipment.

CE Declaration

CE Hereby, X-Rite, Incorporated, declares that this RM200 Series is in compliance with the essential requirements and other relevant provisions of Directive(s) 2014/30/EU (EMC), 2014/35/EU (LVD), and RoHS EU 2015/863.

Bluetooth equipped devices additional comply with Directive RED 2014/53/EU.

FCC Notice

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Industry Canada Compliance Statement

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

If your device is equipped with a Bluetooth wireless transmitter, it contains the following module.

This Device Contains Transmitter Module: RN-42

Manufactured by Microchip Technology

Microchip Technology Inc.
2355 West Chandler Blvd.
Chandler, Arizona 85224
TEL: 480-792-7200

FCC:

RN-42 Microchip Technology
FCC Identifier: T9J-RN42
Output Power: 0.1 Watts
Operating Frequency: 2.400 – 2.4835 GHz

IC:

RN-42 Roving Networks, Inc. / Microchip Technology
Certification No. 6514A-RN42

RED 2014/53/EU:

EN 300328 V2.1.1 (2016)
EN 301489-1 V2.11/V2.2.0 (2017)
EN 301489-17 V3.1.1/V3.2.0 (2017)
EN 60950-1:2006 A11:2009/A1:2010/A12:2011/A2:2013
EN 62479 (2010)

Japan:

RN-42 Roving Networks, Inc. / Microchip Technology



R 201-125709

Korea:


RN-42 Microchip Technology



KCC-CRI-029-RN42

Taiwan:

RN-42 Roving Networks, Inc. / Microchip Technology

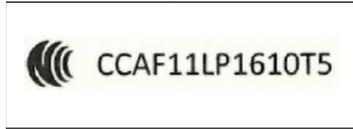

注意！

依據低功率電波輻射性電機管理辦法第十二條經型式認證合格之低功率射頻電機，非經許可，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。第十四條低功率射頻電機之使用不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。前項合法通信，指依電信規定作業之無線電信。低功率射頻電機須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。

China:

Model: RM200+B

CMIIT ID: 2014DJ5822

Limited Warranty

X-Rite warrants this Product against defects in material and workmanship for a period of 90 days from the date of shipment from X-Rite's facility, unless mandatory law provides for longer periods. During such time, X-Rite will either replace or repair at its discretion defective parts free of charge.

X-Rite's warranties herein do not cover failure of warranted goods resulting from: (i) damage after shipment, accident, abuse, misuse, neglect, alteration or any other use not in accordance with X-Rite's recommendations, accompanying documentation, published specifications, and standard industry practice; (ii) using the device in an operating environment outside the recommended specifications or failure to follow the maintenance procedures in X-Rite's accompanying documentation or published specifications; (iii) repair or service by anyone other than X-Rite or its authorized representatives; (iv) the failure of the warranted goods caused by use of any parts or consumables not manufactured, distributed, or approved by X-Rite; (v) any attachments or modifications to the warranted goods that are not manufactured, distributed or approved by X-Rite. Consumable parts and Product cleaning are also not covered by the warranty.

X-Rite's sole and exclusive obligation for breach of the above warranties shall be the repair or replacement of any part, without charge, which within the warranty period is proven to X-Rite's reasonable satisfaction to have been defective. Repairs or replacement by X-Rite shall not revive an otherwise expired warranty, nor shall the same extend the duration of a warranty.

Customer shall be responsible for packaging and shipping the defective product to the service center designated by X-Rite. X-Rite shall pay for the return of the product to Customer if the shipment is to a location within the region in which the X-Rite service center is located. Customer shall be responsible for paying all shipping charges, duties, taxes, and any other charges for products returned to any other locations. Proof of purchase in the form of a bill of sale or receipted invoice which is evidence that the unit is within the Warranty period must be presented to obtain warranty service. Do not try to dismantle the Product. Unauthorized dismantling of the equipment will void all warranty claims. Contact the X-Rite Support or the nearest X-Rite Service Center, if you believe that the unit does not work anymore or does not work correctly.

THESE WARRANTIES ARE GIVEN SOLELY TO BUYER AND ARE IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR APPLICATION, AND NON-INFRINGEMENT. NO EMPLOYEE OR AGENT OF X-RITE, OTHER THAN AN OFFICER OF X-RITE, IS AUTHORIZED TO MAKE ANY WARRANTY IN ADDITION TO THE FOREGOING.

IN NO EVENT WILL X-RITE BE LIABLE FOR ANY OF BUYER'S MANUFACTURING COSTS, OVERHEAD, LOST PROFITS, GOODWILL, OTHER EXPENSES OR ANY INDIRECT, SPECIAL,

INCIDENTAL OR CONSEQUENTIAL DAMAGES BASED UPON BREACH OF ANY WARRANTY, BREACH OF CONTRACT, NEGLIGENCE, STRICT TORT, OR ANY OTHER LEGAL THEORY. IN ANY EVENT OF LIABILITY, X-RITE'S MAXIMUM LIABILITY HEREUNDER WILL NOT EXCEED THE PRICE OF THE GOODS OR SERVICES FURNISHED BY X-RITE GIVING RISE TO THE CLAIM.

Proprietary Notice

The information contained in this manual is derived from patent and proprietary data. The contents of this manual are the property of X-Rite, Incorporated and are copyrighted. Any reproduction in whole or part is strictly prohibited. Publication of this information does not imply any rights to reproduce or use this manual for any purpose other than installing, operating, or maintaining this instrument. No part of this manual may be reproduced, transcribed, transmitted, stored in a retrieval system, or translated into any language or computer language, in any form.

This product may be covered by one or more patents. Refer to the instrument for actual patent numbers.

© 2019 by X-Rite, Incorporated "ALL RIGHTS RESERVED"

X-Rite is a registered trademark of X-Rite, Incorporated. All other logos, brand names, and product names mentioned are the properties of their respective holders.

PANTONE® Colors displayed in the software application or in the user documentation may not match PANTONE-identified standards. Consult current PANTONE Color Publications for accurate color. PANTONE® and other Pantone trademarks are the property of Pantone LLC.
© Pantone LLC, 2010

Pantone is the copyright owner of color data and/or software for use only in combination with CAPSURE. PANTONE Color Data and/or Software shall not be copied onto another disk or into memory unless as part of the execution of CAPSURE.

Table of Contents

Description	9
Package Contents	10
Important Information	10
Getting Started	11
Installing the Software	11
Charging the Battery	11
Powering On and Off (battery operation only).....	12
Initial Startup	12
Function Screens.....	14
Using the CAPSURE Instrument.....	15
General Use.....	15
Navigating the Screens	16
Selecting Samples	17
Obtaining a Good Match.....	17
Non-ideal Samples	17
Calibration	18
Operation	19
Settings Menu	19
Set Aperture	19
Calibrate	20
Language	20
Fan decks.....	20
Volume	21
Product Info.....	22
Date and Time	22
Illumination	22
BT Unpair (CAPSURE Bluetooth only)	23
Tutorial	23
Reset Device	24
BT Standby Timer (CAPSURE Bluetooth only).....	24
Bluetooth on/off (CAPSURE Bluetooth only).....	25
Matching a Sample	26
Saving a Match with a Tag	28
Matching a Patterned or Multicolored Sample with Color Picker.....	29
Finding Alternative Colors Using Navigator	30
Fan deck Browser	30
Color Schemes.....	31
Similar Colors	31
Color Direction	31
Selection Screen	32
Recalling a Saved Record	33
Delete All Records	34

Appendices	35
Troubleshooting.....	35
Screen Messages.....	35
Cleaning.....	36
Cleaning the Optics	36
Cleaning the Calibration Reference	37
Technical Specifications	38
FAQs	38
Bluetooth Device Pairing Procedures (CAPSURE Bluetooth only).....	39


Introduction

Thank you for purchasing the X-Rite CAPSURE, an instrument for matching color. The CAPSURE is a product designed to measure a wider variety of color inspiration items. The instrument matches the colors of your samples to specific fan deck data stored in the instrument's memory. Within seconds, you will know the name/number of the closest color in the stored fan deck that matches your sample.

If available, CAPSURE uses Bluetooth® technology and can communicate wirelessly with other devices, such as iPhones and Androids. To utilize the Bluetooth feature in the CAPSURE, you must first pair CAPSURE with the other device. The pairing procedure is only required the very first time you use the wireless feature to establish a connection. Once complete, CAPSURE automatically connects to the device when used.

For additional information on Bluetooth operation, refer to Bluetooth Device Pairing Procedure in the Appendices.

Description

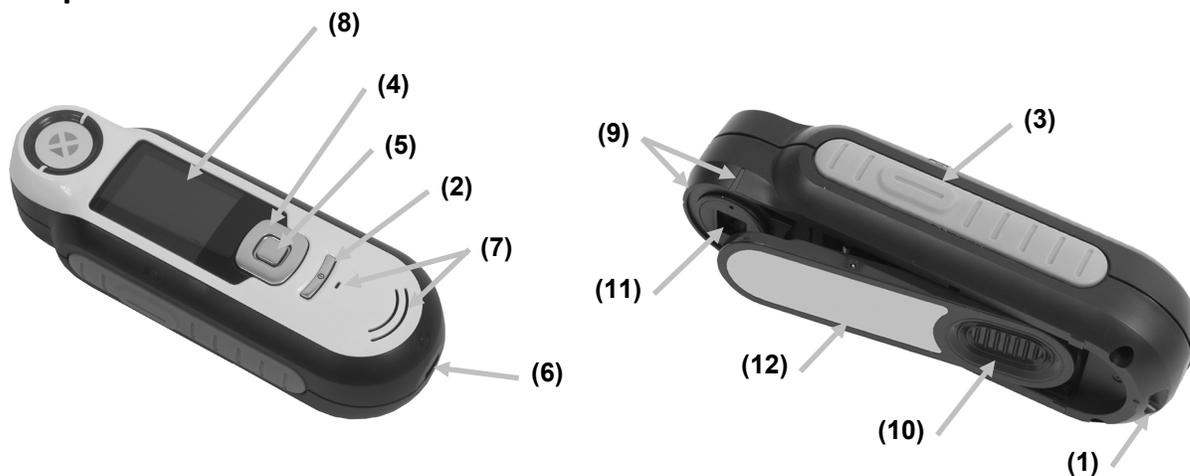

1 - Lanyard loop: Provides a secure way to carry your device.

2 - Power on/off: Used to turn the instrument on and off.

3 - Measure button: Two stage button; press lightly to start preview and firmly to measure. Lightly pressing this button always returns you to the Match screen.

4 - Navigation control: Navigates the on screen menus and function bar in four directions. Pressing on the left side moves the focus to the next available item to the left. Pressing on the right side moves the focus to the next available item to the right. The top and bottom sides perform the same function, only in an up and down direction.

5 -Enter button: Selects menu items and opens tag menu.

6 - USB connection: For charging the battery and interface to the software.

7 - Speaker and Microphone: For recording and playback of voice tags.

8 - Display: Communicates color information, instrument status, and option.

9 - Targeting marks: Allows for easy positioning on samples.

10 - White Reference slider: Positions the calibration tile for measurement or calibration/storage.

11 - Measurement optics: Area that illuminates and measures the color.

12 – Information label: Provides compliance, serial number and other information.

Package Contents

This package should contain the following:

- CAPSURE instrument
- User manual (contained on software CD)
- Lanyard
- Protective carry pouch
- Software CD
- USB cable
- Quick Start Guide

Important Information

The color display of CAPSURE has limited capabilities dependant on viewing conditions. Colors on screen are for guidance only, verify with fan decks for visual accuracy.

The color matches given by the instrument are meant to serve as guidelines only. You should always visually confirm that the color specified by the instrument is an acceptable match to the sample. X-Rite is not liable and assumes no responsibility for inaccurate color identification by the instrument. It is recommended that you refer to your fan deck for final color acceptability.

Variables that may affect the results given by the instrument include:

- Obstructions to the sensors located within the target window.
- Cold weather, which may cause the display to react slowly and matches to be less accurate.
- Improper use of the instrument or attempting to make a match from an unsuitable sample:
 - The instrument was not flat against the sample
 - The sample is highly textured
 - The sample is dirty from handling
 - The sample contains fluorescent, metallic, or pearlescent colorants
 - The sample looks different when viewed at different angles

Getting Started

Installing the Software

The software that is included with your instrument must be installed before plugging the USB cable into the computer. The software installs the required USB drivers for the instrument and a fan deck loader application.

1. Insert the CD into the CD drive. If the CD does not autorun, double-click the **Setup.exe** file on the CD.
2. The setup program guides you through the rest of the installation process. Follow the instructions on each setup screen to complete the installation. When finished, remove the CD and store in a safe location.
3. Refer to the software help system for information on using the application.

Charging the Battery

Before using your CAPSURE for the first time it is important that you charge the battery. If these guidelines are not followed, the internal lithium-ion battery may experience a shortened life.

1. Install the software that accompanied the instrument if you have not already done so.
2. Connect the USB cable to the CAPSURE and your computer's USB port. A battery charging screen momentarily appears. For the first time connection, a language selection screen also appears. Refer to the Initial Startup section on the following page for first time operation.
Note: Some computers have low power USB ports which are typically located at the front. It is recommended that CAPSURE is ONLY connected to high power ports.

During charging, the instrument switches on and indicates charging with a "lightning bolt" in the battery icon. The CAPSURE will not power off while plugged into the computer USB port.

A full charge from empty will take 6 hours connected to a computer USB port.

Battery Icon Information



This icon at the top of the screen would indicate the battery is fully charged.



This icon at the top of the screen would indicate the battery has a sufficient charge for a substantial number of measurements.



This icon at the top of the screen would indicate the battery pack is low, but measurements are still possible. Battery should be charged soon.



This icon momentarily appears in the center of the screen and at the top when the instrument is connected to the computer, indicating the battery is charging.



The "lightning bolt" in the center of the icon at the top of the screen indicates the battery is charging.



This icon momentarily appears in the center of the screen when the instrument is disconnected from the computer.

Battery status is also reported in the Product Info menu item of the Settings window.

Powering On and Off (battery operation only)

Turn the instrument on by pressing and releasing the **Power** button.



You are asked to calibrate the instrument. Please follow the on screen instructions for calibration (refer to the Calibration section later in this manual for details).

The instrument automatically powers down into a sleep mode between 40 to 80 seconds of inactivity to conserve battery power. Any button press from the sleep mode will wake up the instrument. A CAPSURE Bluetooth will power down after 5 minutes of inactivity by default. The default time can be modified by editing the “Standby timer” option in the Setting Menu.

After 75 minutes of inactivity, the instrument powers completely off. From this state, you will need to press the Power button to turn on the instrument.

You can manually power down the instrument by pressing the **Power** button, highlighting **Yes** from on the screen, and pressing the **Enter** button. Make sure to always position the white reference slider over the optics when powering down the instrument. You will need to press the Power button to turn on the instrument when this power down method is used.

Initial Startup

The very first time CAPSURE is powered on, you are asked to select the desired operating language for the instrument. After the language is selected, you can go through a short tutorial on using the instrument and then select the required fan decks and perform a calibration.

The initial startup options are also chosen from within the Settings menu. Refer to the Setting menu in the Operation section to review and set other options, such as time and date.


Language Selection

1. Select the language from the list by pressing the up and down sides of the **Navigation** control. Refer to the Introduction section for button locations.
2. Press the **Enter** (Select) button to activate the language and continue with the Tutorial.




View Tutorial

1. View the tutorial by pressing the right side of the **Navigation** control. Pressing the left side of the **Navigation** control takes you back one screen.

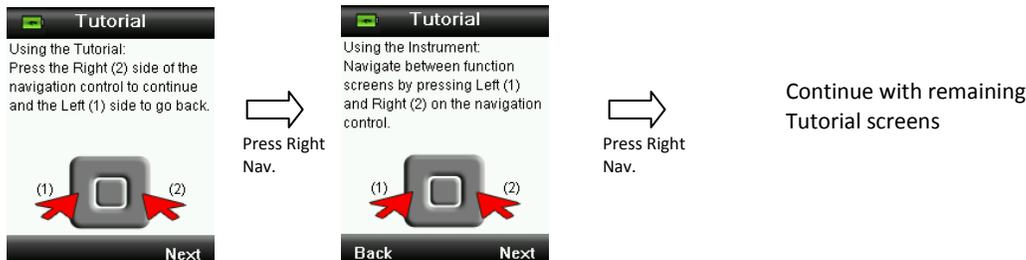


2. After the last Tutorial screen appears, press the right side of the **Navigation** control to continue with the fan deck selection.

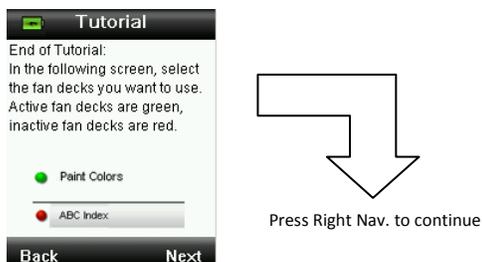


Fan deck Selection

1. Select the fan deck(s) from the list that you would like to use by pressing the up and down sides of the **Navigation** control.
2. Press the **Enter** (Select) button to activate (green) or deactivate (red) the fan deck. Refer to the Setting menu in the Operation section for additional information on fan deck options.
3. Press the right side (Exit) of the **Navigation** control to continue with Calibration.

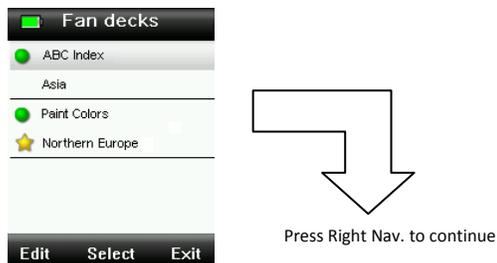

Instrument Calibration


1. Perform a calibration as described on the screen. For additional information on calibration, refer to the Calibration section later in this manual.

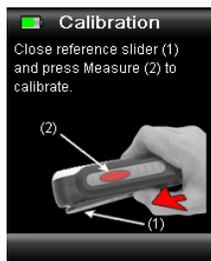

Function Screens

The CAPSURE has been designed to allow easy navigation between functions with the principle of one color being active at a time.

Functions are selected by pressing the left or right sides of the **Navigation** control. The active function is indicated by the highlighted icon on the function bar and the title of the window.

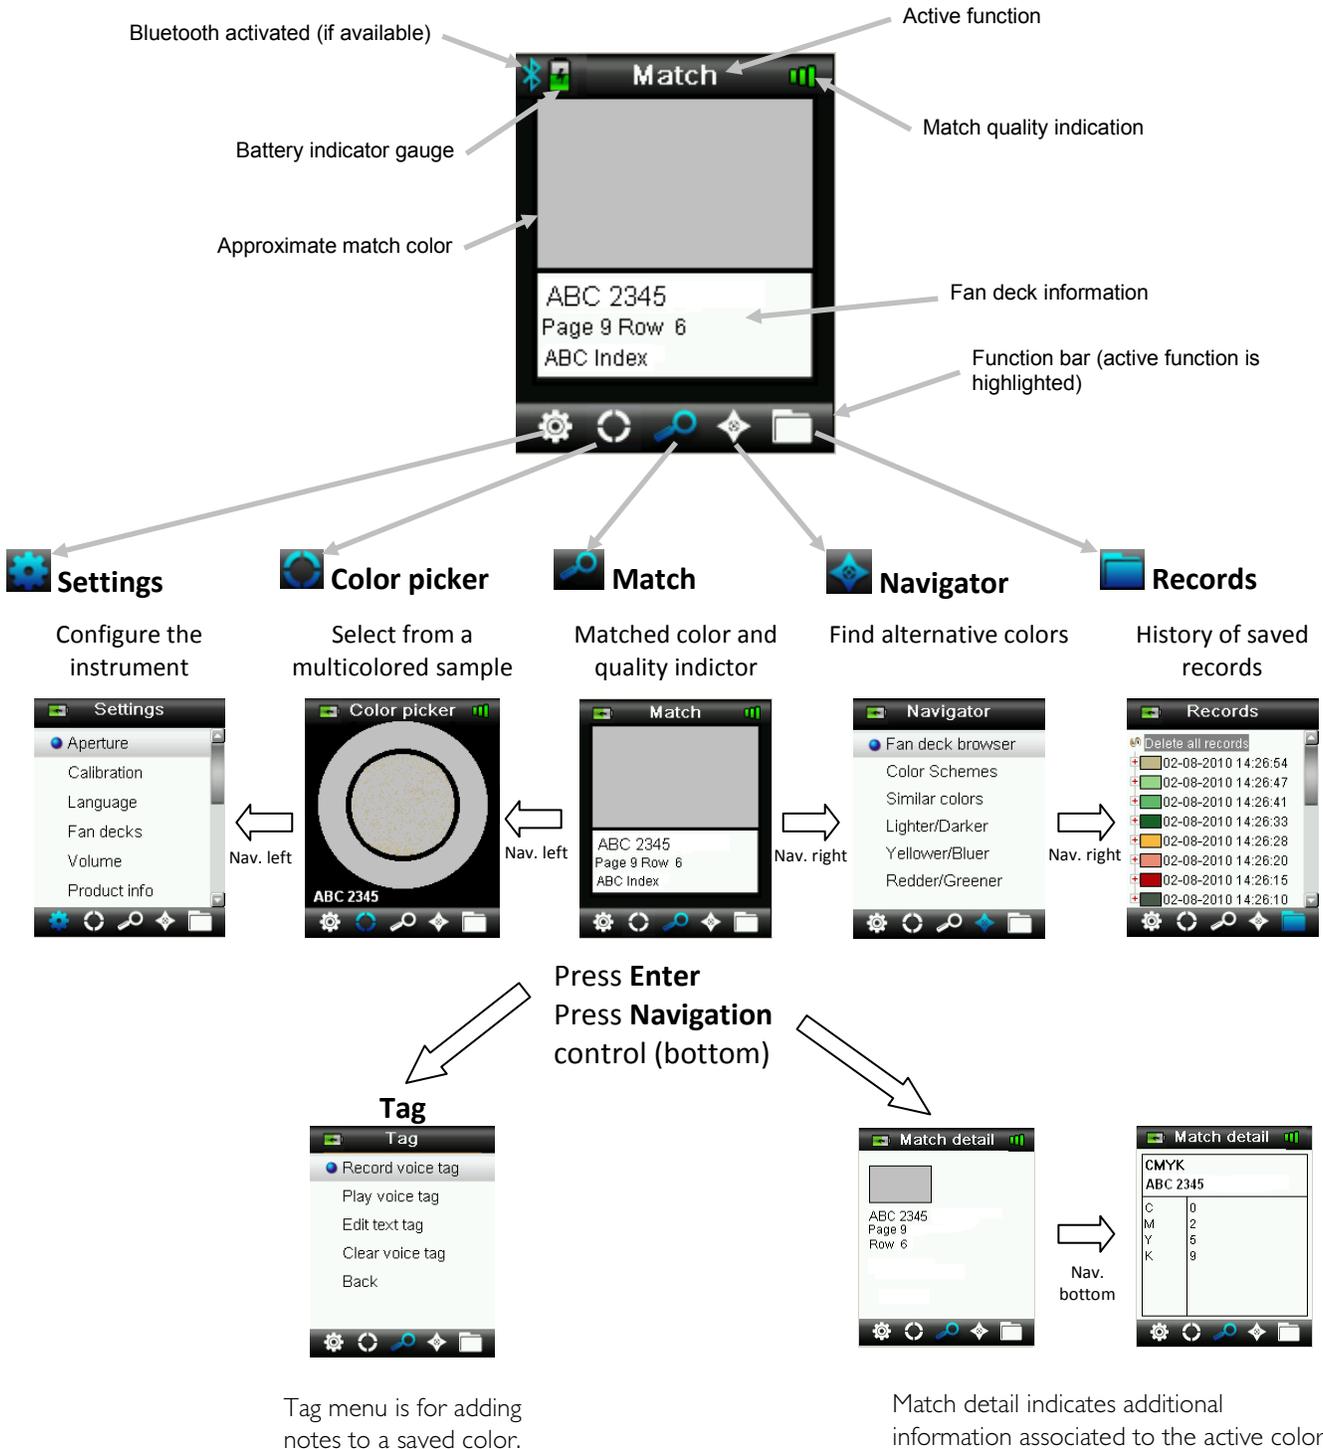

Using the CAPSURE Instrument

General Use

When holding the instrument by its sides, it should be easy to press the Measure button on the side with your thumb or index finger.

To match a color, place the instrument flat against a color sample with the center of the sample positioned under the measurement optics. Lightly press the **Measure** button to enable an on screen preview of the sample for fine positioning. Hold the instrument steady and press the **Measure** button firmly and release. An audible “camera-click” sound indicates the start of the measurement. A progress bar appears at the bottom of the display to indicate the measurement status. It is important that the instrument is held steady for the duration of the measurement. Color information appears in the display after the progress bar reaches 100%. (Refer to the Operation section later in this manual for additional details.)



Horizontal, vertical, and angled orientations are acceptable as long as the instrument makes good contact with the sample.

When the matching is complete, the reference name/number of the color in the instrument's database that best matches your sample's color appears in the display.



Depending on the fan deck selected, additional information associated to the color can be displayed and selected using the Navigation control.

Up to 100 measurements are automatically saved and optional voice and text tags can be assigned to each.

Navigating the Screens

Many secondary screens contain the words “Back”, “Select”, and “Exit” at the bottom. This refers to actions that take place when using the **Navigation** control and **Enter** button.

Back – indicates that the display is jumping back to the previous screen. This is selected by pressing the left side of the Navigation control.

Select – indicates that the option or item highlighted in the screen will be selected. This is chosen by pressing the Enter button.

Exit – indicates that the current screen will be closed and returned to the main match screen. This is selected by pressing the right side of the Navigation control.



Screens that contain images of “arrows” indicate that the Up and Down sides of the Navigation control are used to adjust or page-through options and colors.



Selecting Samples

The CAPSURE instrument is unique in that it has been designed to measure a wide variety of inspiration items without the limitations on minimum size or surface textures. CAPSURE employs the principle of WYSIWYG (What You See Is What You Get).

The advanced X-Rite camera technology and state of the art multi directional LED illumination enables the instrument to:

- Compensate for surface irregularities with the use of a surface flatten algorithm. This enables comparison between textured sample measurements and smooth fan decks.
- Pick dominant colors from a sample measurement that have more than one color in the measurement view area.
- Measure Small (2 mm), Medium (4 mm) and Automatic/Large (8 mm) sample areas. The Automatic/Large setting can be used to measure samples less than 2 mm, if the desired color has a large enough proportion in the view area to be selected as a dominant color.
- Measure textile samples that do not have an opaque weave by the removal of the background color.

Obtaining a Good Match

The instrument works best on samples that are dry and opaque. Samples can be oriented horizontally (on a table top), vertically (on a wall), or at an angle. To obtain a good match, make sure the instrument is flat against the sample and is held steady during the match.

Curved or uneven sample: If the sample has a curved or uneven surface, try taking several measurements at different positions on the sample. The color that is shown most often is the closest match.

Thin or translucent sample: If the sample is thin, place it on a flat surface before taking a measurement. If the sample is not opaque, place it on a white (plain paper) backing before taking a measurement.

Non-ideal Samples

Successful color matches will be difficult or impossible to obtain if samples have any of the following characteristics:

- Very curved surfaces
- Samples that change appearance based on point of view, which may contain metallic, flake, or pearlescent colorants
- Samples that appear unusually bright (may contain fluorescing pigments)


Calibration

IMPORTANT: The calibration reference is dramatically affected by smudge marks and dust, and must be kept clean. It is recommended that the instrument is cleaned regularly. Refer to the Cleaning section later in this manual for procedure on cleaning the calibration reference and optics.


When your instrument is first turned on, you are asked to perform a calibration. Thereafter, a calibration is required every hour or if a 5°C temperature change has occurred. Calibration of the instrument ensures optimum color matching performance. If desired, a calibration can be manually initiated by selecting Calibrate from the Settings menu.

The instrument includes an integrated white reference slider that protects the white reference when not in use.


1. When displayed to do so, move the white reference slider to the closed/calibration position over the optics.
2. Press **Measure** to initiate the calibration when the reference slider is positioned. A progress bar appears at the bottom of the display to indicate the calibration status.

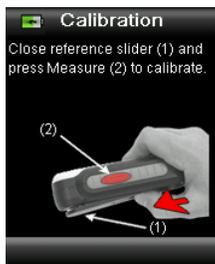

3. After a successful calibration, you are prompted to reposition the slider back to its storage location before measuring samples.

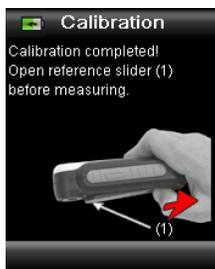

Note: An error will be displayed if the white reference slider was not in the correct position for calibration. If this occurs, close the slider and repeat the calibration process. After recalibration this message continues, refer to Troubleshooting in the Appendices.

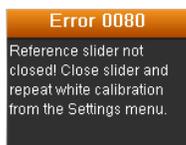

If at any time the instrument requests “Repeat Calibration” this is due to exceeding the current temperature variation tolerance. Please recalibrate by initiating from the Settings menu.

Operation



Settings Menu

The Setting menu is used to set instrument options, initiate a calibration and view production information from this menu. You should review and set the options as needed before using your instrument for the first time.

1. Select the Settings icon in the function bar by pressing the left side of the **Navigation** control.



2. Select the setting option from the list by pressing the up and down sides of the **Navigation** control.



3. Press the **Enter** button to select the option.

Refer below for an explanation of each option.

Set Aperture

The aperture option is used to set the aperture size that the instrument defaults to when a color match is started. You can select Automatic/Large (8 mm) Medium (4 mm) or Small (2 mm). Automatic is the setting that is used for automatic multicolor extraction and texture compensation.


1. Select the aperture option from the list by pressing the up and down sides of the **Navigation** control.



2. Press the **Enter** (Select) button to select the option and return to the Settings window.

Calibrate


The calibration option allows you to manually initiate a calibration. Refer to the Calibration section earlier in this manual for information on performing a calibration.

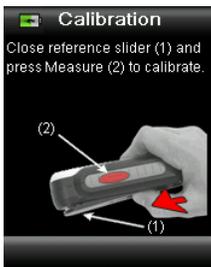

Language

The language option allows you to select the languages that the instrument operates in. This screen also appears when the instrument is turned on for the first time.

1. Select the language option from the list by pressing the up and down sides of the **Navigation** control.

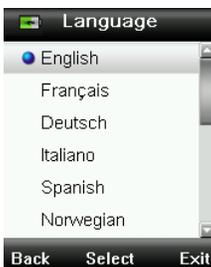


2. Press the **Enter** (Select) button to select the language and return to the Settings window.

Fan decks


The CAPSURE instrument is capable of storing up to a total of 15 fan decks. Each fan deck can be enabled or disabled, allowing for a color match to be found from the desired collections. A fan deck can also be set as a “priority” fan deck. This allows the first match to be found to preferentially come from the “priority” fan deck. The priority fan deck is highlighted with a star icon.

A list of the installed fan decks is displayed with a red or green icon next to the name. A green icon indicates that the fan deck is active and a red icon indicates that fan deck is not active.

1. Select the fan deck(s) from the list by pressing the up and down sides of the **Navigation** control.
2. Press the **Enter** (Select) button to activate (green) or deactivate (red) the fan deck.
3. When a fan deck is activated, press the left side (Edit) of the **Navigation** control to access the fan deck settings screen.

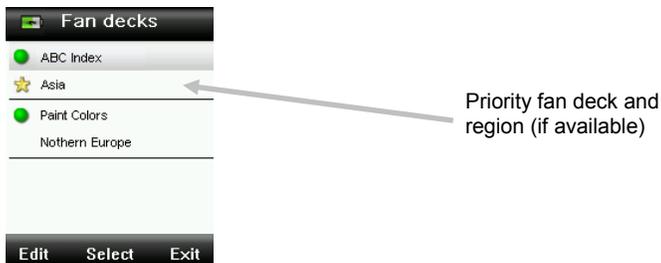

4. Select the fan deck settings option from the list by pressing the up and down sides of the **Navigation** control.

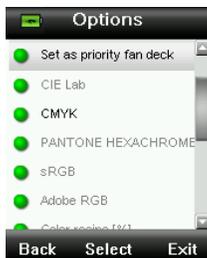


5. Press the **Enter** (Select) button to activate (green) or deactivate (red) the option.
6. When finished, press the left side of the **Navigation** control (Back) to return to the Fan decks screen, or press the right side of the **Navigation** control (Exit) to go to the Match screen.


Volume

The volume option is used to set the system volume and the voice tag volume.


1. Select System volume or Voice tag volume by pressing the up and down sides of the **Navigation** control.
2. Press the **Enter** (Select) button to open the volume level screen.

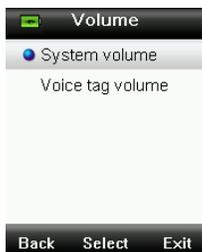

3. Press the up or down sides of the **Navigation** control to set the desired volume level.
4. Press the **Enter** (Select) button to save the volume level and return to the Volume window.

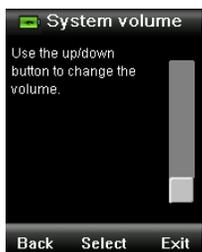

or

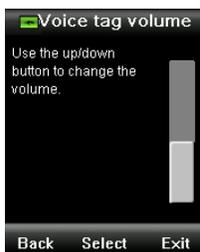

- Set the other volume level or press the right side of the **Navigation** control (Exit) to go to the Match screen.

Product Info

This screen displays important instrument information. Press the down side of the **Navigation** control to view additional information.



Version information for the fan decks currently installed in the instrument can be found at the end of the Product Info screen.

Date and Time

The date and time option is used to set the current time, date and format for the instrument.

- Select the date and time option from the list by pressing the up and down sides of the **Navigation** control.



- Press the **Enter** button to open the date/time window.
- Press the left and right sides of the **Navigation** control to select the month/day/year, hours/minutes/seconds, and format (US or Europe).
- Press the up and down sides of the **Navigation** control to set the selected date and time attribute. When format is selected, pressing the up and down sides of the **Navigation** control will alternate between US and Europe format.
- Press the **Enter** button to save your settings and return to the Settings window.

Illumination


The illumination option is used to display the “Match Detail” under the selected lighting condition.

- A 10°** – represents an incandescent light source with a 10° wide view standard observer.
- D65 10°** – represents noon daylight with a 10° wide view standard observer.
- A 2°** – represents an incandescent light source with a 2° narrow view standard observer.
- D50 2°** – represents indirect daylight with a 2° narrow view standard observer.
- D65 2°** – represents noon daylight with a 2° narrow view standard observer.

F2 2° – represents wide band fluorescent light source with a 2° narrow view standard observer.

TL84 2°– represents narrow band fluorescent light source with a 2° narrow view standard observer.

1. Select the illumination option from the list by pressing the up and down sides of the **Navigation** control.

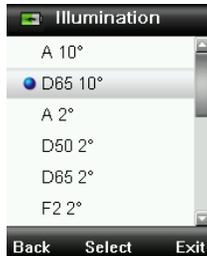


2. Press the **Enter** (Select) button to select the illumination and return to the Settings window.

BT Unpair (CAPSURE Bluetooth only)

If the CAPSURE Bluetooth device fails to pair or disappears from the available list of Bluetooth devices, a “BT Unpair may be required. After unpairing, repeat the connection process for Apple iOS or Andriod.

1. Select the BT Unpair option from the list by pressing the up and down sides of the **Navigation** control.

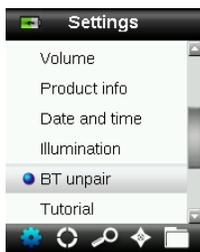

2. Press the **Enter** button to unpair the device. An Unpair succeeded screen appears.
3. Refer to the Bluetooth Device Pairing Procedure in the Appendices.

Tutorial

The Tutorial option provides information on using the instrument.

1. Select the tutorial option from the list by pressing the up and down sides of the **Navigation** control.



2. Press the **Enter** button to view the tutorial.

3. Refer to the Initial Startup section earlier in this manual for information on viewing the tutorial.

Reset Device

The reset device option is used to reset the instrument back to the factory defaults. Any stored records that exist will also be deleted.

1. Select the reset device option from the list by pressing the up and down sides of the **Navigation** control.



2. Press the **Enter** button. You are asked to confirm that you want to reset the device.



3. Highlighting **Yes** on the screen and press the **Enter** button. The instrument is now reset and all stored records are deleted.

BT Standby Timer (CAPSURE Bluetooth only)

The BT standby timer option is used to set the amount of time that the CAPSURE will remain connected to a device without any activity before timing out. The time can be set from 1 minute to 60 minutes in one minute increments.

1. Select the BT standby timer option from the list by pressing the up and down sides of the **Navigation** control.



2. Press the **Enter** button to access the setting option.
3. Press the up and down sides of the **Navigation** control to set the time (1-60 minutes).
4. Press the **Enter** button to save your setting.
5. Refer to the Bluetooth Device Pairing Procedure in the Appendices.


Bluetooth on/off (CAPSURE Bluetooth only)

The Bluetooth on/off option is used to turn Bluetooth on or off in CAPSURE. Once on, a gray Bluetooth icon appears at the top of the screen. This icon is an indication that the Bluetooth option is activated. After CAPSURE is paired with the other device, the color of the Bluetooth icon will change to blue. The icon will remain blue until the connection is lost or unpaired.

Bluetooth Status

Off  Enabled  Connected 

1. Select the Bluetooth option from the list by pressing the up and down sides of the **Navigation** control.

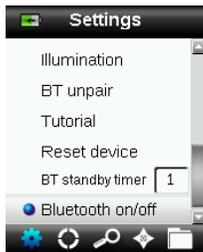


2. Press the **Enter** button to turn the option on or off.
3. Refer to the Bluetooth Device Pairing Procedure in the Appendices.



Matching a Sample

Make sure the white reference slider is in the storage location and position the CAPSURE on to the sample as previously explained.


1. Lightly press and hold the **Measure** button to activate the preview. The area to be measured is indicated in the preview by the circle.

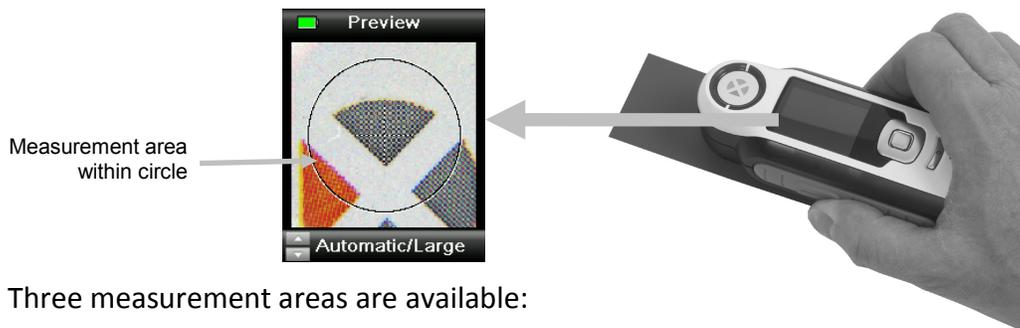

Three measurement areas are available:


- Small (2 mm aperture)
- Medium (4 mm aperture)
- Automatic/Large (8 mm with automatic multicolor extraction and texture compensation)

2. Adjust the measurement area by pressing on the up or down side of the **Navigation** control while lightly holding down the **Measure** button.

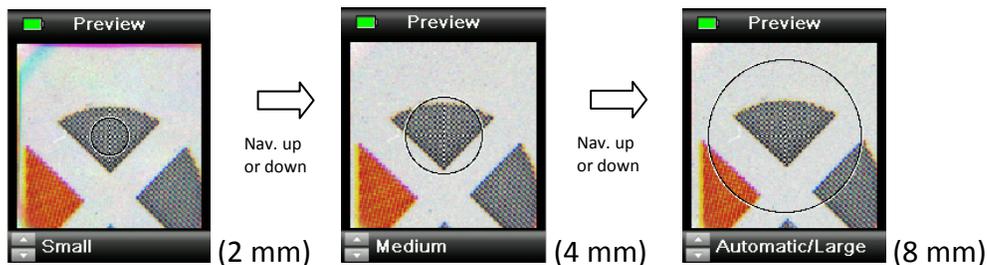

Note: You can preset your aperture preference in the Settings menu.

 3. When you have located the area you wish to measure, press the **Measure** button firmly. An audible “camera-click” sound indicates the start of the measurement. A progress bar appears at the bottom of the display to indicate the measurement status. It is important that the instrument is held steady for the duration of the measurement.



The closest match is displayed for the measurement from the active fan decks. Refer to the Setting Menu section earlier in this manual for procedure on activating fan decks.



Match Quality Indication

After a match, the instrument displays 1, 2, or 3 colored bars in the title row of the display. The bars indicate the quality of the match that was obtained. One “red” bar indicates an ok match, two “yellow” bars indicate a better match, and three “green” bars indicate the best match. No color bars would indicate no close match was found.



 = Best match

 = Better match

 = Ok match

 = No close match

The bars are for informational purpose only. Three “green” bars is the best possible match, where as one “red” or two “yellow” bars indication basically informs you that instrument made a suitable match. The fewer color bars on a measurement, the more likely color differences will be noticed.

Additional details about the identified color can be displayed by pressing down side of the **Navigation** control.



Note: The additional match details that display depend on the fan deck used.

Important: All sRGB and Adobe 98 values are displayed as per specification calculation under D65/2.



Saving a Match with a Tag

Each measurement or selected color is automatically saved in the history record. A voice tag or text tag can be saved with each color match.


CAPSURE can store a maximum of 100 measurements which are stored in date & time order. When the limit of 100 records is reached the oldest record is automatically deleted.

1. From the Match window, press the **Enter** button to display the Tag window.



2. **Voice Tag**

To record a voice tag for the active color, select **Record voice tag** from the list and press and hold the **Enter** button down. Speak into the microphone located below the power button. You have a maximum of 30 seconds recording time per record. When finished, release the **Enter** button.

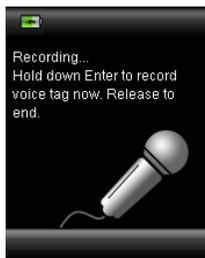

To listen to the voice tag you just recorded, select **Play voice tag** from the list and press the **Enter** button.

To delete the voice tag you just recorded, select **Clear voice tag** from the list and press the **Enter** button.

3. **Text Tag**

To add a text tag for the active color, select **Edit text tag** from the list and press **Enter**. Add your note with the virtual keyboard using the **Navigation** control and **Enter** button. When finished, highlight **OK** on the virtual keyboard and press the **Enter** Button.




4. Exit the Tag window by selecting **Back** from the list and pressing the **Enter** button.




Matching a Patterned or Multicolored Sample with Color Picker

The Color Picker function is used on patterned, woven or multicolored samples that you wish to match a specific color from. Up to four colors within your image can be identified. For example, this can be used if you did not wish to extract individual shades on textured surfaces or textiles where potential multiple colors may be found.


1. Make sure the aperture is set to the Automatic/Large option. This enables the instrument to automatically determine if there is more than one color in the measurement area.
2. Take a measurement as described in the Matching a Sample section earlier in this manual.

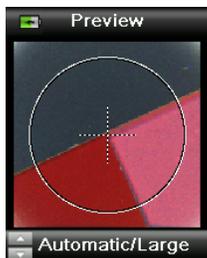

The initial color displayed in the Match window is the average color across the measurement area. Once CAPSURE detects a sample containing more than one color, the Color Picker icon in the function bar begins rotating and an audible tone is heard. The screen then automatically advances to the Color Picker function. Individual colors are selected from this screen.

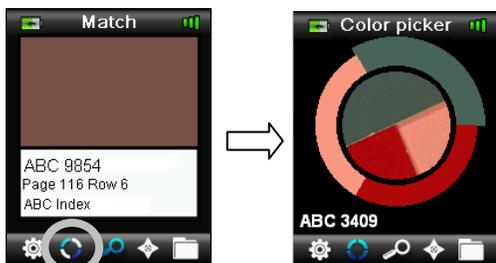

3. Color descriptions for each color can be displayed by pressing on the up or down sides of the **Navigation** control. The selected color is highlighted around the circle.

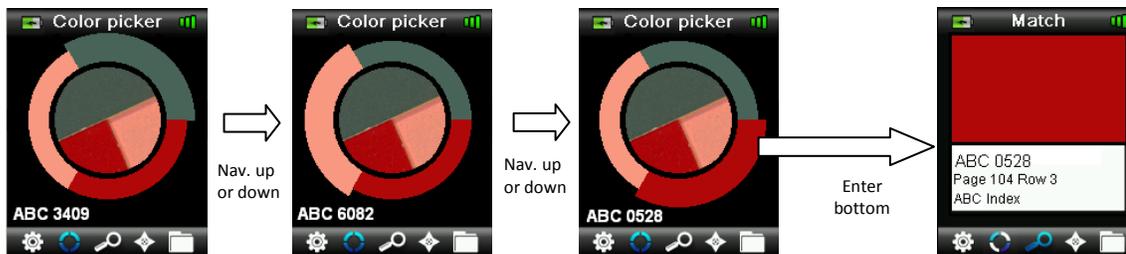

4. Select the desired color by pressing **Enter** to display details of the match.



Finding Alternative Colors Using Navigator

The Navigator function enables you to find alternative colors for the identified match.

1. Perform a match or recall a stored color.
2. Select the Navigator icon in the function bar by pressing on the right side of the **Navigation** control.



3. Select the method you wish to use to locate an alternate color by pressing on the up or down sides the **Navigation** control.
4. Press the **Enter** button after the method is selected.



Fan deck Browser

Allows you to search through a fan deck visually to find a color.

1. Select the fan deck you wish to use by pressing on the up or down sides the **Navigation** control.




2. Press the **Enter** (Select) button to select the fan deck and enter the Fan deck browser screen.



3. Refer to Selection Screen later in this section for a detailed description on using this screen.

Color Schemes

Displays preprogrammed color palettes/schemes for the matched color in the current fan deck. Certain fan decks will also displays a method (description) for each color scheme.

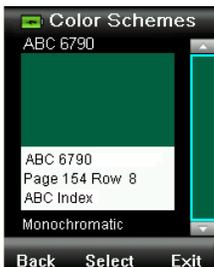

Refer to Selection Screen later in this section for a detailed description on using this screen.

Similar Colors


Displays a list of close colors searched across active fan decks.



Refer to Selection Screen later in this section for a detailed description on using this screen.

Color Direction

Lighter/Darker + Yellower/Bluer + Redder/Greener – Displays a range of colors across all active fan decks moving in each of the color directions.

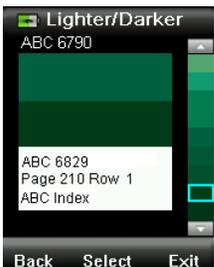


Refer to Selection Screen later in this section for a detailed description on using this screen.

Selection Screen

Each alternate color method utilizes the identical selection screen to choose a color. Refer below for a description of the screen.

1. Scroll through the available colors using the up and down sides of the **Navigation** control. For each color a visual comparison is given against the active color and the alternate.
2. To make the alternate color the active color, press the **Enter** button. All colors set as activate are saved to the Records.

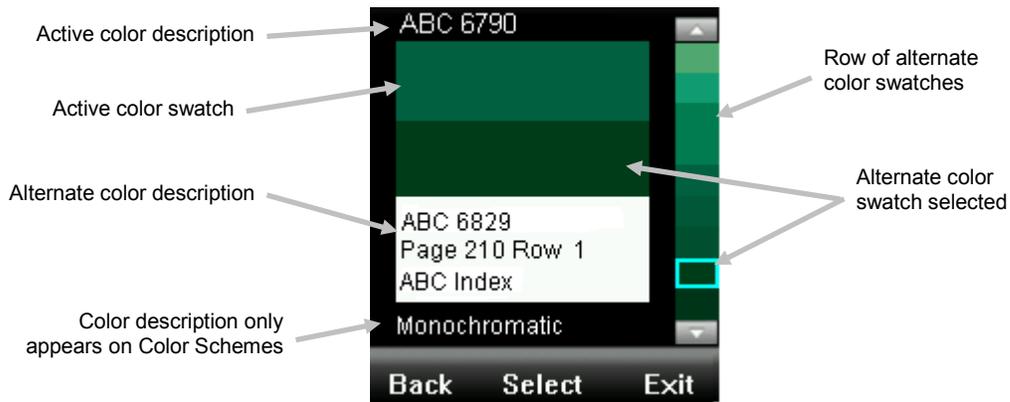

To exit without activating an alternate color, press on the left side of the **Navigation** control (Back) to return to the Navigator screen, or press the right side of the **Navigation** control (Exit) to go to the Match screen.



Recalling a Saved Record

The Records function enables you to retrieve a stored match from the instruments database, delete an individual record, or delete all stored records.


1. Select the Records icon in the function bar by pressing on the right side of the **Navigation** control.



2. Scroll through the measurement records by pressing the up and down sides of the **Navigation** control.



3. You can view more details for the selected record by pressing the **Enter** button to expand the record.

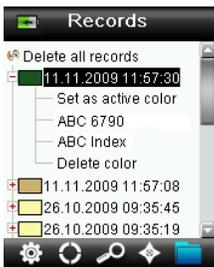

Set as active color

This recalls all information for the saved color and allows editing of tags and viewing of alternate colors.

Play associated voice tag

Used to identify the saved color (if a recording is present).

Display associated text tag

Used to identify the saved color (if a text tag is present).


Delete color

Used to delete the selected color.

Delete All Records

This option allows you to delete all stored records on the instrument.

1. Press the up and down sides of the **Navigation** control to highlight **Delete all records**.

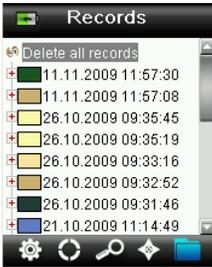

2. Press the **Enter** button. You are asked to confirm that you want to delete all.



3. Highlighting **Yes** on the screen and press the **Enter** button. All records are now deleted from the instrument.

Appendices

Troubleshooting

Symptom	Action
Will not turn on	Press and hold the Power button. Charge battery / plug in to USB port.
Instrument not responding	Hold down on/off button 10 seconds to turn off then restart.
Instrument will not switch off	Remove the USB connection. Hold down on/off button 10 seconds to turn off then restart
Too much ambient light detected	Make sure you keep the instrument on the sample until the end of the measurement. Shield the sample to keep light from entering the optics during a measurement on very rough or curved samples. On transparent samples try to prevent light from entering the samples from sides or back. Place sample on a white background.
Instrument requests a "Recalibrate"	Recalibrate the instrument using the Calibrate function in the Settings menu.
"Reference slider not closed!" continually displays after calibrating more than once.	You will need to perform seven calibration procedures in a row. This will set a new reference point and correct the problem.
I can't hear the voice recording	Increase the volume in the Settings menu. Make sure you hold down the Enter button during recording.

Screen Messages

Screen messages can appear in the display during error conditions or for informational purposes. Some messages are cleared from the instrument screen by pressing the **Enter** button.

Messages may also be accompanied by a number to indicate a specific condition. If an error condition persists, contact technical support at 800.248.9748 or visit www.xrите.com.

**Sample Error
Message**



Cleaning

The instrument should be stored with calibration slider in the closed position when not in use.

 Do not immerse the instrument in liquid, and do not use anything other than a water-dampened cloth for cleaning the exterior.


The measurement optics and calibration plaque should be kept clean from dust and dirt for the highest level of accuracy.

Cleaning the Optics

The optics are recessed and therefore protected from dirt during normal usage. However, if the optics do require cleaning, follow the procedure below.

IMPORTANT: If can air is used for cleaning, do not invert or tilt the can during use. This could cause damage to the optics.


1. Carefully place your thumb over the optics opening and rotate the aperture 45° counterclockwise.

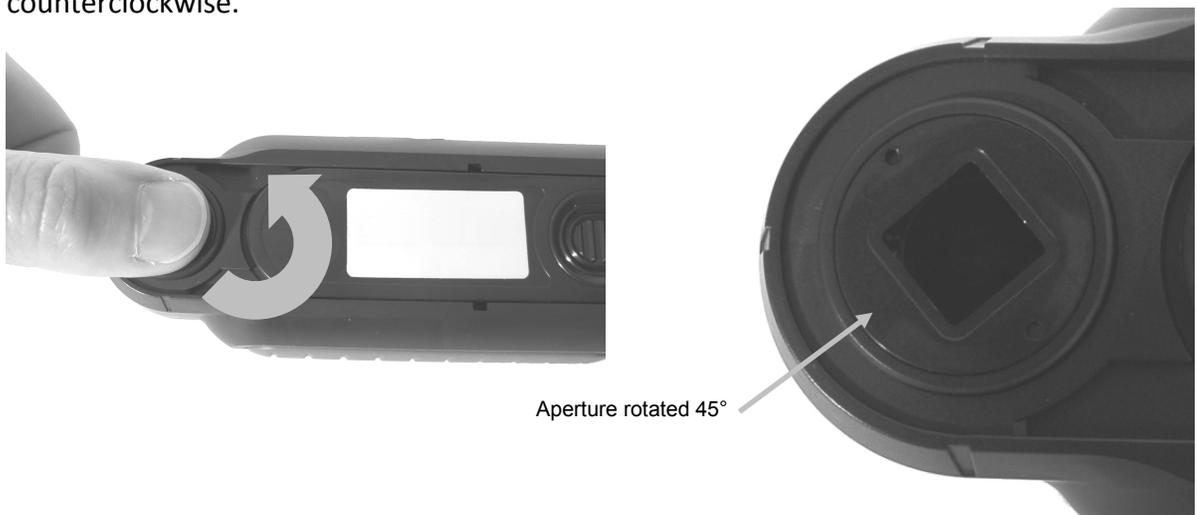

2. Remove the aperture from the optics housing and set aside.



3. Blow short bursts of clean, dry air into the optics port. This should remove any accumulated debris from the optics.

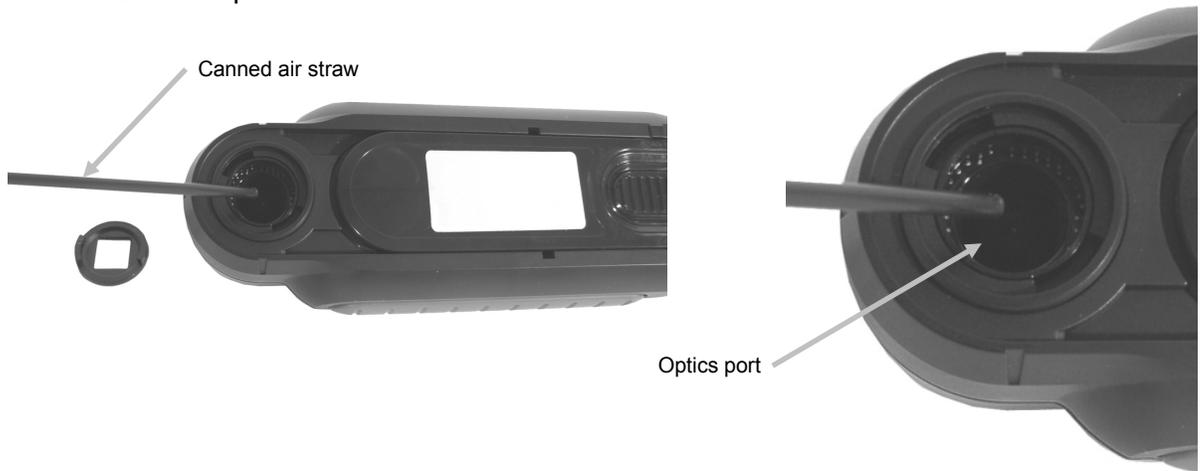

4. Reposition the aperture over the optics housing and turn 45° clockwise to lock into place.

Cleaning the Calibration Reference

The calibration tile is imbedded in the underside of the white reference slider.

1. Opening reference slider to a halfway position.
2. Blow short bursts of clean, dry air onto the calibration tile. This should remove any accumulated debris.



Technical Specifications

Measurement time:	< 3 seconds
Operating Temp:	0° to 40°C (50° to 104°F)
Storage temp:	-20° to 60°C (-4° to 140°F)
Humidity Range:	20- 80% RH (non-condensing)
Usage:	Indoor use only
Altitude:	2000m
Pollution Degree:	2
Transient Overvoltage:	Category II

FAQs

1. How many color matches does the instrument store?
100 color matches.
2. What are the ideal samples to match?
The samples should be smooth, dry, solid in color and opaque.
3. How do I clean the instrument?
Please see the instructions in the Cleaning section.
4. What should I do if the instrument doesn't power-up?
If the battery is too low the instrument will not power-up. Charge the unit through its USB connection.
5. How do I contact technical support?
Phone:
800.248.9748 USA
(+41) 44 842 24 00 Europe
(+852) 2 568 6283 Asia
Website: www.xrite.com

Bluetooth Device Pairing Procedures (CAPSURE Bluetooth only)

To use your Bluetooth enabled phone or tablet with CAPSURE you must first pair the devices together before you can connect to an App. Once the pairing process is complete the connection remains in memory enabling quick reconnection when the devices are switched ON and Off. The following devices/operating systems are supported by CAPSURE Bluetooth.

Apple: iPhone 4, 4S, 5; iPad 2, 3; iPod Touch 4, 5 (operating system iOS 5 and 6)

Android: 2.3 Gingerbread, 3.0 Honeycomb, 4.0 Ice Cream Sandwich, and 4.1 / 4.2 Jellybean

General Notes

- When Bluetooth is ON the CAPSURE sleep time is set to 5 minutes.
- When Bluetooth is OFF the CAPSURE sleep time is set to 10 seconds.
- When the CAPSURE sleeps the Bluetooth connection is dropped. The Bluetooth connection will automatically be remade when the CAPSURE awakes. This process may take up to 20 seconds.

Preparing CAPSURE

1. Turn CAPSURE power On.
2. If not already done, turn the Bluetooth option on and set the Bluetooth Standby timer. Refer to the Setting Menu section earlier in this manual.
3. Calibrate the CAPSURE if required.

The CAPSURE remembers the last state of the Bluetooth and will restart in this state when the Power is switched On/Off.

Connecting an Apple iOS device

1. Switch on the iPhone/iPad/iPod and enter the settings menu.
2. Select Bluetooth and turn Bluetooth ON.
3. The iOS device will now scan the area for available Bluetooth devices. All available Bluetooth devices with Apple connectivity will be listed here.
4. The CAPSURE device should now appear on the iOS device screen as an available Bluetooth device. The CAPSURE will be listed as RM200 #XXXX and it should be shown in black text.



5. Select the CAPSURE RM200 #XXXX to pair to the iOS device.
6. The iOS device should initiate pairing. This may take up to 20 seconds.
7. Once the pairing process is complete the RM200 #XXXX text will turn blue and “connected” will be displayed next to the device name. On the CAPSURE the Bluetooth symbol will change color from Grey to Blue.



Notes for iOS connections

- You can only connect with 1 iOS device at a time.
- To connect with another device you must first unpair from the connected device.

Connecting an Android device

1. Open the Settings application.
2. Touch Wireless & networks > Bluetooth settings.
3. Check Bluetooth to turn it on. Your tablet scans for and displays the IDs of all available Bluetooth devices in range.



If the CAPSURE you want to pair with isn't in the list, ensure that the CAPSURE is turned on and Bluetooth is switched On.

4. If your tablet stops scanning before CAPSURE is ready, touch Find nearby devices and then Scan for devices.
5. Touch the ID of the CAPSURE in Found list to pair them.
6. Click “OK” to confirm any passkey request to connect with CAPSURE.



7. Once the pairing process is complete the RM200 #XXXX will turn appear in your Paired devices, indicating you have successfully connected your two devices.



The Apple or Android App can now be started.

China RoHs Disclosure Table

产品中有害物质的含量							
X-Rite, Incorporated. Model RM200 Series (Capsure)							
Instrument Assembly	仪器组件	有害物质					
		铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr6)	多溴联苯 (PBB)	多溴联苯醚 (PBDE)
All PCB Assembly	全部 PCB 组件	X	O	O	O	O	O
Metal Fasteners	金属扣件	X	O	O	O	O	O
Display	显示	O	O	O	O	O	O
Plastic Components	塑胶元件	O	O	O	O	O	O
Packaging Material	包装材料	O	O	O	O	O	O
<p>本表格依据 SJ/T 11364 的规定编制。 Table prepared in accordance with SJ/T 11364-2014 standards.</p>							
<p>O: 表示该有害物质在该部件所有均质材料中的含量均在 GB/T 26572 规定的限量要求以下。 Indicates the concentration of the hazardous substance in all homogeneous material of the part is below the threshold GB/T 26572 standards.</p>							
<p>X: 表示该有害物质至少在该部件的某一均质材料中的含量超出 GB/T 26572 规定的限量要求。 Indicates the concentration of hazardous substance in at least one homogeneous material of the part is above the threshold of the GB/T 26572 standards.</p>							
<p>产品采用的EPUP条件 - 在中国销售的电子电气产品环保使用期限的, 按下列安全注意事项使用的产品, 从生产之日起的表达, 使用有害的产品包含在生命体征内物质不会对环境, 人身和财产造成严重影响。</p>							
<p>Products EPUP conditions of use - in Chinese sales of electrical and electronic products environmental protection use period, expressed according to the following Safety Precautions for the use of the product, starting from the date of manufacture, the use of harmful product contained within the life signs substance does not have a serious impact on an environment, persons and property.</p>							



Corporate Headquarters

X-Rite, Incorporated
4300 44th Street SE
Grand Rapids, Michigan 49512
Phone 1 800 248 9748 or 1 616 803 2100
Fax 1 800 292 4437 or 1 616 803 2705

European Headquarters

X-Rite Europe GmbH
Althardstrasse 70
8105 Regensdorf
Switzerland
Phone (+41) 44 842 24 00
Fax (+41) 44 842 22 22

Asia Pacific Headquarters

X-Rite Asia Pacific Limited
Suite 2801, 28th Floor, AXA Tower
Landmark East, 100 How Ming Street
Kwun Tong, Kowloon, Hong Kong
Phone (852)2568-6283
Fax (852)2885 8610

Please visit www.xrite.com for a local office near you.