


- Quick colour formulation at Point-Of-Sale


The Synergy T3 software is designed to handle recipes/formulas at the point-of-sale. The system has functions for formula management, dispensing, label printing, colour measurement etc. in an user-friendly environment.

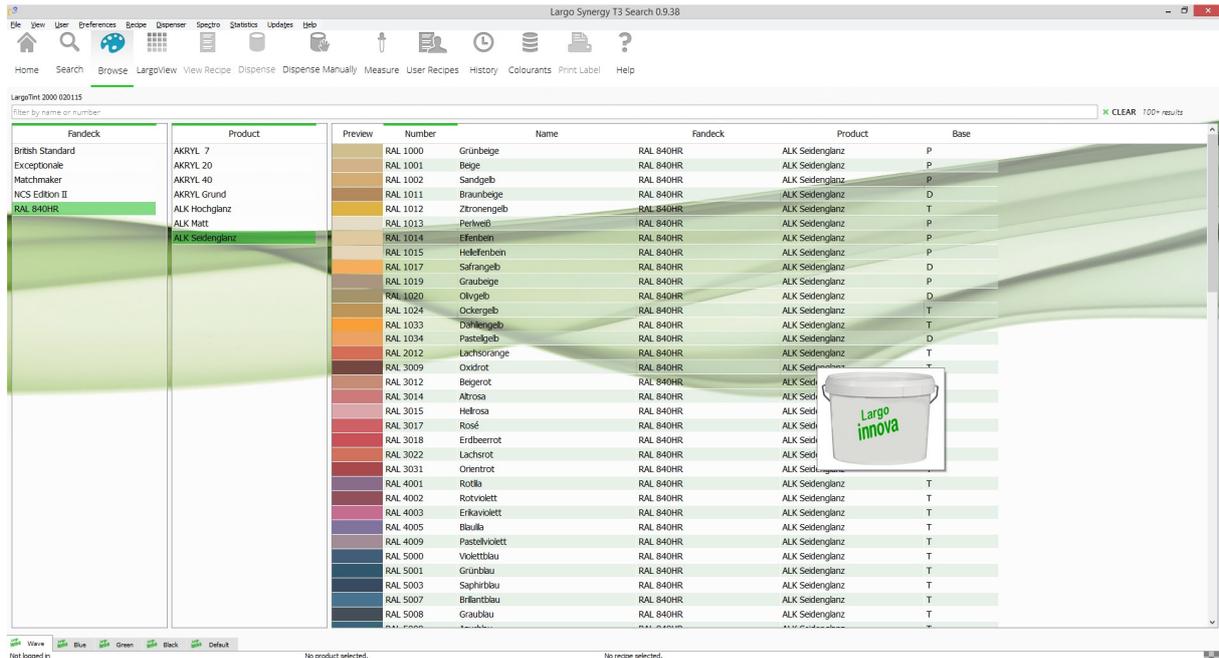

Today the growing use of dispensing machines, the mergers between companies and their spread into different parts of the world creates a demand for the easy handling of different types of dispensers from several suppliers. A mixture of automatic, semi-automatic and manual dispensers is very common and this situation can create time consuming routines for updating standard recipes, installations etc which will be solved by using Synergy T3 and its options for different users need.

Synergy T3 can be set to retrieve statistic over tinted colours, usage of colorants etc via e-mail, internet or disc, which will give the paint manufacturer an overview of trends in colour choices. The system can locally be configured to receive updates of recipes automatically via e-mail, ftp or manually via disc. Synergy T3 can handle multiple tinting systems and control more than 4 different dispensers parallel from the same pc.

The screen can be customized with your logo and own icons in CSS format. Your logos for different brands, products, cans, fan decks will be shown to market your company even more.

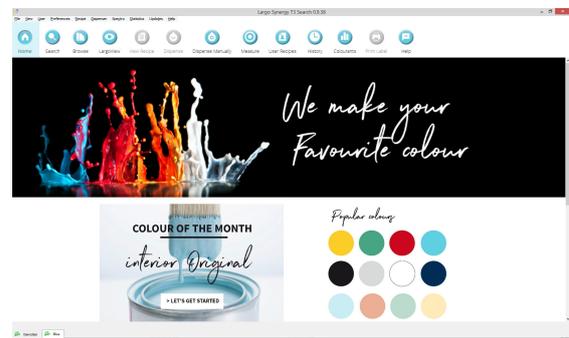

The option **Formulate** will shorten time needed to find the right colour match for you. Your customer will feel safe and satisfied when you measure and formulate their own sample of wished shade - a happy customer will return.

How does it work?


The Synergy T3 software is for the daily use with drop-down menus for each working area - File, View, User, Preferences, Recipe, Dispenser, Statistics and Help.

For easy access the toolbar has short cuts for the most commonly used functions. The available features will be highlighted depending where in the process the operator is. The **Formulate** by colour match is completely integrated, just a click and ready to measure.




The Formulation can be run in two different modes: "easy mode" and advanced mode".

The process is very fast: you only select product /brand from the available ones in the scroll bar and measure your sample. In "easy mode" you will only see the best recipe in each category dE, Metamerism, Variance and Price

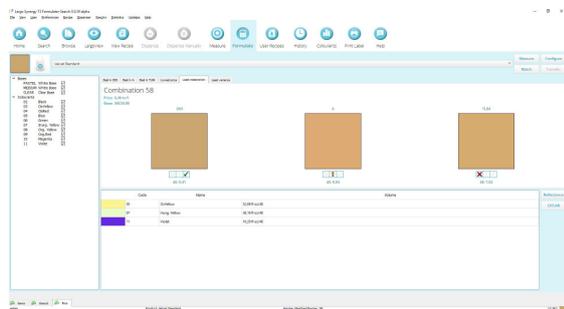

In "advanced mode" you will have a full list of all formulated recipes within the configured tolerances where you can select the best balance between e.g. dE and Price.

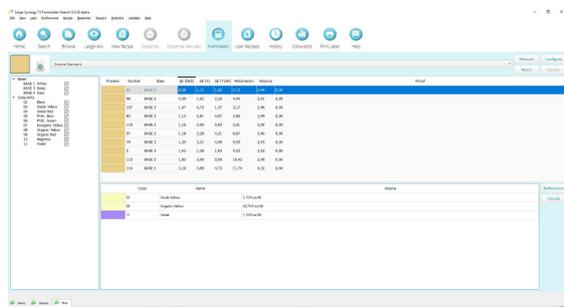

To see the content in each recipe, just mark it and the recipe is shown below the list on screen.

Mark the recipe you want in list by clicking it, press dispense and select can size.

Features

Among the functions available from the drop-down menu you can create personal user login for easy track of e.g. manual tints and storage. You can edit existing and delete your own recipes.


Depending on what kind of dispenser you run, there are different features for maintenance available. You easily dispense your recipe in the chosen can size one by one or in multiples. Through "Dispense Manually" you can enter a recipe and get it tinted as well.

In "Preferences" you configure your tinting systems with type of dispenser, colorants, recipes, connect product leaflets, create price groups, labels, statistics, history, bar code readers, measuring device and so on.

Options

For quick search at the shop or retailer, it is possible to add on the following:

- **Synergy T3 Formulate with Search** - measure and search among your recipes for best match,

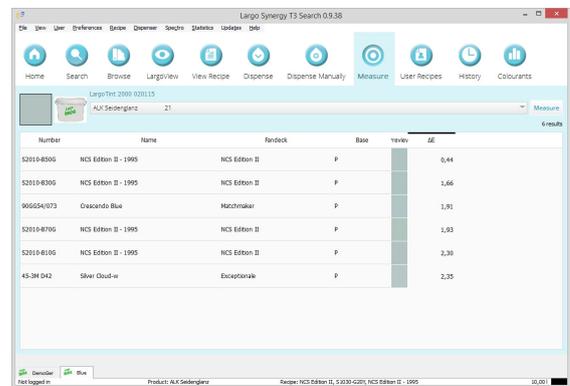

or to formulate a new recipe for a customer sample. Store it e.t.c. giving your customer the best service.

For more information - www.largo innova.com



Sweden, Tel: +46 (0)300-514 60
E-post: info@largo innova.se

Germany, Tel: +49 (0)6471 513 54
Fax: +49 (0) 6471 516 92 80